

Projector Model	Bulb Part No.
Christie Projector CP2000	03-000698-01P
Christie Projector DLV1280-DX	03-000495-02P
Christie Projector DS+25	03-000866-01P
Christie Projector DS+25W	03-000866-01P
Christie Projector DS+26	003-120181-01
Christie Projector DS+300	03-900520-01P
Christie Projector DS+300W	03-900520-01P
Christie Projector DS+4K	03-000833-01P
Christie Projector DS+5K	03-000833-01P
Christie Projector DS+60	03-900520-01P
Christie Projector DS+65	003-120198-01
Christie Projector DS+650	003-000884-01
Christie Projector DS+8K	03-000834-01P
Christie Projector DS30	03-000710-01P
Christie Projector DS30W	03-000710-01P
Christie Projector DW30	03-900520-01P
Christie Projector DW3K	03-000833-01P
Christie Projector DW3Kc	03-000833-01P
Christie Projector DW6K	03-000834-01P
Christie Projector DW6Kc	03-000834-01P
Christie Projector HD5K	003-120117-01

Christie Projector HD5Kc	003-120117-01
Christie Projector HD6K	003-120117-01
Christie Projector LS+58	03-000881-01P
Christie Projector LU77	03-000709-01P
Christie Projector LW25U	03-000649-01P
Christie Projector LW300	003-120239-01
Christie Projector LW40U	03-000761-01P
Christie Projector LX120	003-120183-01
Christie Projector LX25	03-000754-02P
Christie Projector LX25	03-000754-01P
Christie Projector LX25A	03-000754-02P
Christie Projector LX25U	03-000754-02P
Christie Projector LX32	03-000712-01P
Christie Projector LX34	03-000712-01P
Christie Projector LX37	03-000750-01P
Christie Projector LX380	003-120242-01
Christie Projector LX40	03-000882-01P
Christie Projector LX45	03-000750-01P
Christie Projector LX450	003-120242-01
Christie Projector LX50	03-000882-01P
Christie Projector LX55	003-120188-01
Christie Projector LX66	03-000881-01P

Christie Projector LX66A	03-000881-01P
Christie Projector Matrix 1500	03-000710-01P
Christie Projector Matrix 2000	03-000866-01P
Christie Projector Matrix 2000W	03-000866-01P
Christie Projector Matrix 3000	03-900520-01P
Christie Projector Matrix 4000	03-000833-01P
Christie Projector Mirage 10000	10-000551-01S